

USB to Multi RS-232/422/485 Interface Converter

**Connect up to eight DB9 serial devices
to a USB port.**

Configurable via software; no jumpers or switches to set.



**Customer
Support
Information**

Order toll-free in the U.S.: Call 877-877-BBOX (outside U.S. call 724-746-5500)
FREE technical support 24 hours a day, 7 days a week: Call 724-746-5500 or fax
724-746-0746 • Mailing address: Black Box Corporation, 1000 Park Drive, Lawrence,
PA 15055-1018 • Web site: www.blackbox.com • E-mail: info@blackbox.com

FEDERAL COMMUNICATIONS COMMISSION AND
INDUSTRY CANADA RADIO FREQUENCY INTERFERENCE STATEMENTS

This equipment generates, uses, and can radiate radio-frequency energy, and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, may cause interference to radio communication. It has been tested and found to comply with the limits for a Class A computing device in accordance with the specifications in Subpart B of Part 15 of FCC rules, which are designed to provide reasonable protection against such interference when the equipment is operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference, in which case the user at his own expense will be required to take whatever measures may be necessary to correct the interference.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This digital apparatus does not exceed the Class A limits for radio noise emission from digital apparatus set out in the Radio Interference Regulation of Industry Canada.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la classe A prescrites dans le Règlement sur le brouillage radioélectrique publié par Industrie Canada.

Normas Oficiales Mexicanas (NOM)
Electrical Safety Statement
INSTRUCCIONES DE SEGURIDAD

1. Todas las instrucciones de seguridad y operación deberán ser leídas antes de que el aparato eléctrico sea operado.
2. Las instrucciones de seguridad y operación deberán ser guardadas para referencia futura.
3. Todas las advertencias en el aparato eléctrico y en sus instrucciones de operación deben ser respetadas.

4. Todas las instrucciones de operación y uso deben ser seguidas.
5. El aparato eléctrico no deberá ser usado cerca del agua—por ejemplo, cerca de la tina de baño, lavabo, sótano mojado o cerca de una alberca, etc.
6. El aparato eléctrico debe ser usado únicamente con carritos o pedestales que sean recomendados por el fabricante.
7. El aparato eléctrico debe ser montado a la pared o al techo sólo como sea recomendado por el fabricante.
8. Servicio—El usuario no debe intentar dar servicio al equipo eléctrico más allá lo descrito en las instrucciones de operación. Todo otro servicio deberá ser referido a personal de servicio calificado.
9. El aparato eléctrico debe ser situado de tal manera que su posición no interfiera su uso. La colocación del aparato eléctrico sobre una cama, sofá, alfombra o superficie similar puede bloquea la ventilación, no se debe colocar en libreros o gabinetes que impidan el flujo de aire por los orificios de ventilación.
10. El equipo eléctrico deber ser situado fuera del alcance de fuentes de calor como radiadores, registros de calor, estufas u otros aparatos (incluyendo amplificadores) que producen calor.
11. El aparato eléctrico deberá ser conectado a una fuente de poder sólo del tipo descrito en el instructivo de operación, o como se indique en el aparato.
12. Precaución debe ser tomada de tal manera que la tierra fisica y la polarización del equipo no sea eliminada.
13. Los cables de la fuente de poder deben ser guiados de tal manera que no sean pisados ni pellizcados por objetos colocados sobre o contra ellos, poniendo particular atención a los contactos y receptáculos donde salen del aparato.
14. El equipo eléctrico debe ser limpiado únicamente de acuerdo a las recomendaciones del fabricante.
15. En caso de existir, una antena externa deberá ser localizada lejos de las lineas de energia.

16. El cable de corriente deberá ser desconectado del cuando el equipo no sea usado por un largo periodo de tiempo.
17. Cuidado debe ser tomado de tal manera que objetos líquidos no sean derramados sobre la cubierta u orificios de ventilación.
18. Servicio por personal calificado deberá ser provisto cuando:
 - A: El cable de poder o el contacto ha sido dañado; u
 - B: Objetos han caído o líquido ha sido derramado dentro del aparato; o
 - C: El aparato ha sido expuesto a la lluvia; o
 - D: El aparato parece no operar normalmente o muestra un cambio en su desempeño; o
 - E: El aparato ha sido tirado o su cubierta ha sido dañada.

Trademarks Used in this Manual

Black Box and the Double Diamond logo are registered trademarks of BB Technologies, Inc.

Windows and Windows Vista are registered trademarks of Microsoft Corporation.

Any other trademarks mentioned in this manual are acknowledged to be the property of the trademark owners.

Table of Contents

Table of Contents

- 1. Specifications 7
- 2. Overview 8
 - 2.1 Introduction 8
 - 2.2 Features 8
 - 2.3 What’s Included 9
 - 2.4 Optional Items You May Need 9
 - 2.5 Hardware Description 10
- 3. Installation and Configuration 11
 - 3.1 Software Installation 11
 - 3.2 Hardware Installation 11
 - 3.3 Verifying Installation..... 12
 - 3.4 Hardware Configuration 13
 - 3.4.1 Electrical Interface Mode Selection 13
 - 3.4.2 Interface Biasing 14
 - 3.4.3 Line Termination 15
 - 3.4.4 Echo..... 16
 - 3.4.5 High-Retention USB Type B Port..... 16
 - 3.4.6 Status LEDs 17
 - 3.4.7 DB9M Serial Connectors..... 17
 - 3.4.8 Locking USB Cables 17
- Appendix A. Troubleshooting 18
 - A.1 Troubleshooting Tips..... 18
 - A.2 Contacting Black Box 21
 - A.3 Shipping and Packaging 22
- Appendix B. Electrical Interfaces 23

1. Specifications

Interface — (8) RS-232/422/485 serial ports, (1) USB

Maximum Data Rate — Up to 921.6 kbps

UARTs — High-speed USB/UARTs with 128-byte TX FIFOs and 384-byte FIFOs

Connectors — (1) high-retention USB Type B, (8) DB9 serial

Temperature Tolerance — Operating: +32 to +158° F (0 to +70° C);
Storage: -50 to +105° F (-58 to +221° F)

Relative Humidity — Operating: 10 to 90%, noncondensing;
Storage: 10 to 90%, noncondensing

Power — Derives 500 mA power from your computer or a self-powered hub

NOTE: This device is a high power USB device. It must be plugged directly into a USB port on your computer or a self-powered hub capable of supplying 500 mA per port. Some laptop computers running on battery power and non-powered USB hubs do not provide the full 500mA necessary to power this device.

Size — 2.4"H x 5.3"W x 9.2"D (6.1 x 13.5 x 23.4 cm)

2. Overview

2.1 Introduction

The USB to Multi RS-232/422/485 Interface Converter (IC293A) provides an easy way to connect up to eight DB9 serial device(s) to a single USB port. All configuration and electrical interface selections are handled through the driver, so you don't have to open the enclosure to set jumpers or switches. The serial port is software configurable for RS-232, RS-422, or RS-485 (full- and half-duplex).

The IC293A software drivers and utilities make installation and operation easy for Windows® 98SE, ME, 2000, XP, and Vista operating systems. Once the software is installed, plug the interface converter into an available USB port. Each serial port is recognized as a standard COM port by the host system enabling compatibility with legacy software. Serial data rates to 921.6 kbps are supported.

To prevent accidental cable disconnection, the interface converter integrates a patent-pending high-retention locking USB port that is fully compatible with standard USB cables. When used with the included USB cable with a high-retention USB type B connector, the metal thumbscrew provides a secure connection to the device. Standard operating temperature range is 32 to 158° F (0 to 70° C) and extended temperature range is -4 to +185° F (-40° C to +85° C). Status LEDs display electrical interface selection and serial data activity for each port.

2.2 Features

- Each port is individually software configurable for RS-232, RS-422, and two-wire or four-wire RS-485.
- Maintains electrical interface settings across multiple computers.
- Includes high-speed UART with 128-byte Tx FIFO and 384-byte Rx FIFO.
- Automatically enables/disables hardware RS-485.
- DB9M connector serial port supports data rates to 921.6 kbps.
- Powered by USB host connection.
- Implements full modem control signals in RS-232 mode.
- Status LEDs indicate power, electrical interface, and serial data activity for each port.
- Flexible mounting options.

2.3 What's Included

The interface converter ships with the following items. If any of these items is missing or damaged, contact Black Box Technical Support at 724-746-5500 or info@blackbox.com.

IC293A:

- USB to Multi RS-232/422/485 Interface Converter
- (1) 6-ft. (1.8-m) high-retention USB Type B cable
- Software and this user's manual on CD-ROM

2.4 Optional Items You May Need

Depending upon your application, you might also need the following items. Contact Black Box Technical Support at 724-746-5500 or info@blackbox.com for details.

Cables:

- DB9F to DB25M (RS-232) Extension Cable (BC03000-0006-MF)

The BC03000-0006-MF is a standard AT-style RS-232 modem cable with a DB9F connector on one end and a DB25M connector on the other. This cable is 72 inches long.

- DB9F to DB9M Extension Cable (BC00200)

The BC00200 allows users to extend a DB9 cable up to six feet. The connectors are pinned one-to-one so the cable is compatible with any device or cable that has DB9 connectors.

Terminal blocks:

The IC981 terminal block breaks out a DB9 connector to nine screw terminals to simplify field wiring of serial connections including RS-422 and RS-485 networks. The IC981 is designed to connect directly to Sealevel DB9 serial cards or any cable with a DB9M connector.

Adapters and Converters:

The FA756 is a DB9 female to RJ-45 adapter. It can be configured without tools, and it is an excellent choice for using available infrastructure wiring.

2.5 Hardware Description

Figures 2-1 and 2-2 show the front and back panels of the IC293A. Table 2-1 describes its components.

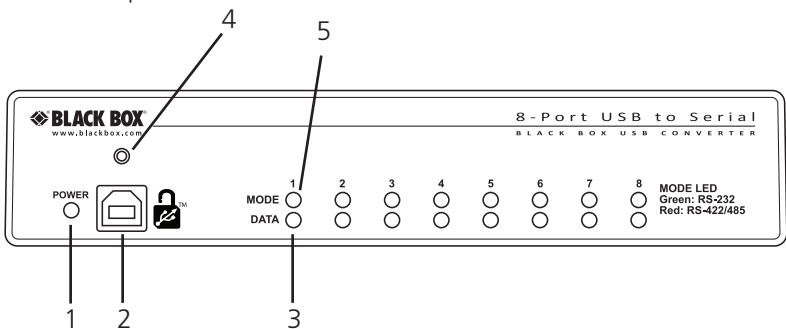


Figure 2-1. Front panel: Multi Port interface converter (IC293A).

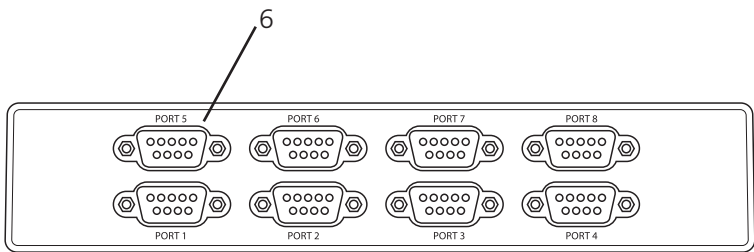


Figure 2-2. Back panel: Multi Port interface converter (IC293A).

Table 2-1. IC293A components.

Number	Component	Description
1	Power LED	Lights when the hub is properly powered through the USB port.
2	High-retention USB Type B connector	Links securely to USB device via cable.
3	(8) Data LED(s)	Blinks when data is being transmitted or received.
4	Hole for thumbscrew	Securely holds USB cable in place.
5	(8) Mode LED(s)	Lights green when RS-232 mode is selected. Lights red when RS-422 or RS-485 mode is selected.
6	(8) DB9 connector(s)	Links to (8) serial device ports.

3. Installation and Configuration

3.1 Software Installation

Windows 98/ME/ 2000/XP/Vista Operating Systems

1. Start Windows.
2. Insert the included software CD in to your CD/DVD drive.
3. If “Auto-Start” is enabled the installation window will automatically appear. Otherwise, navigate to the root directory of your CD drive and double-click the “autorun.exe” application to launch the installation window.
4. Click the “Install” button.
5. Type in your part number (IC293A) or select your adapter from the listing.
6. Click the “Install Drivers” button.
7. The setup file will automatically detect the operating environment and install the proper components.

To confirm that the driver has been successfully installed, click on the “Start” button, and then select “All Programs.” You should see the SeaCOM program folder listed.

You are now ready to proceed with connecting the IC293A to your system. Refer to the Hardware Installation section for details.

NOTE: Windows NT is not USB aware, so it cannot support this device.

3.2 Hardware Installation

NOTE: Do not connect the device to a USB port until the software has been successfully installed.

To install the IC293A, plug the device into an available USB port using the supplied USB cable. The following instructions were tested with Windows XP and may vary based on your version of Windows.

Once the device has been connected, the Found New Hardware wizard will appear first for the root hub and then for each port that you are installing. Follow the instructions on the next page to finish installation.

NOTE: The installation will repeat twice for each COM port (a total of sixteen times on eight port devices). This is a limitation in the way Windows installs external serial devices.

Chapter 3: Installation and Configuration

1. Click on “Install the software automatically” followed by the “Next” button.
2. Windows will show a warning message that the hardware has not passed Windows logo testing. Click on “Continue Anyway.”

NOTE: All applications and drivers have been fully tested to maintain the integrity of your operating system. Clicking on “Continue Anyway” will not harm your system in any way.

3. Click on “Finish.” Repeat this process for the remaining ports on the IC293A.

3.3 Verifying Installation

To confirm that the drivers have been successfully installed, you can look in Device Manager under “Ports (COM & LPT)” and each of the ports you installed will be included on the list with their associated COM numbers. To access Device Manager, follow the steps below:

1. Right-click on the “My Computer” icon on your desktop or in the Start menu.
2. Click on “Properties” in the fly-out menu to launch the “System Properties” window.
3. Click on the “Hardware” tab and then click on the “Device Manager” button.
4. When Device Manager launches, look under “Ports (COM & LPT)” to verify that the serial ports have been correctly installed.

NOTE: Your system will assign the next available COM numbers which may vary for each computer used.

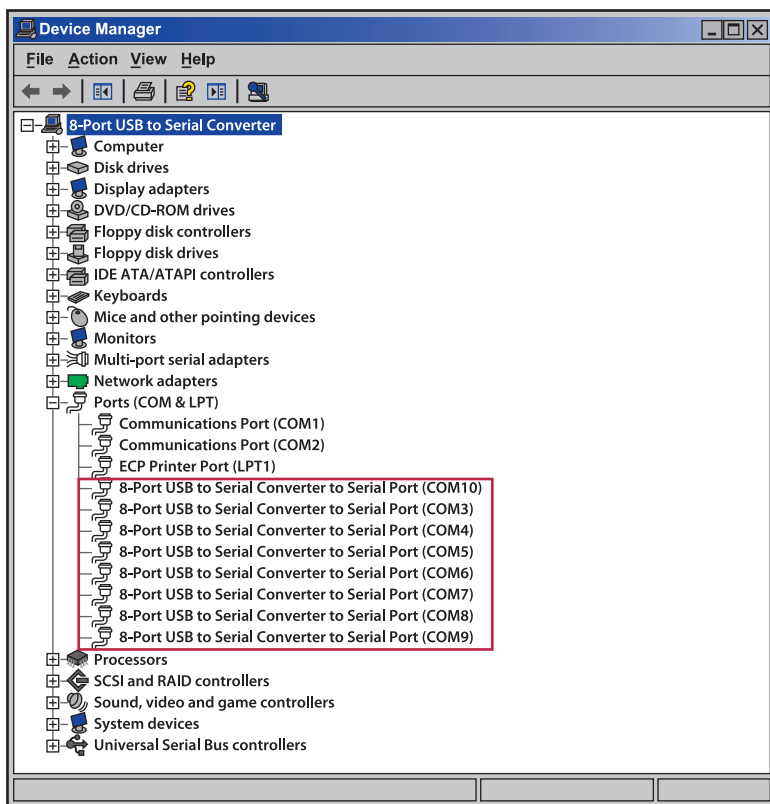


Figure 3-1. Device Manager screen.

3.4 Hardware Configuration

3.4.1 Electrical Interface Mode Selection

The interface converter offers RS-232, RS-422, and RS-485 (full- and half-duplex) modes. The electrical interface is a software selectable feature that can be accessed and changed using the included driver via Device Manager. To select the electrical interface, follow the steps below:

1. Open Device Manager and locate "Ports (COM&LPT)" following the steps above. You should see the port(s) listed.
2. Select one of the ports by right-clicking on it and selecting "Properties" from the fly-out menu. The serial port properties menu will appear.
3. Click on the "Interface Settings" tab.

NOTE: The included driver adds the “Interface Settings” tab. If this tab is missing, the software is not correctly installed.

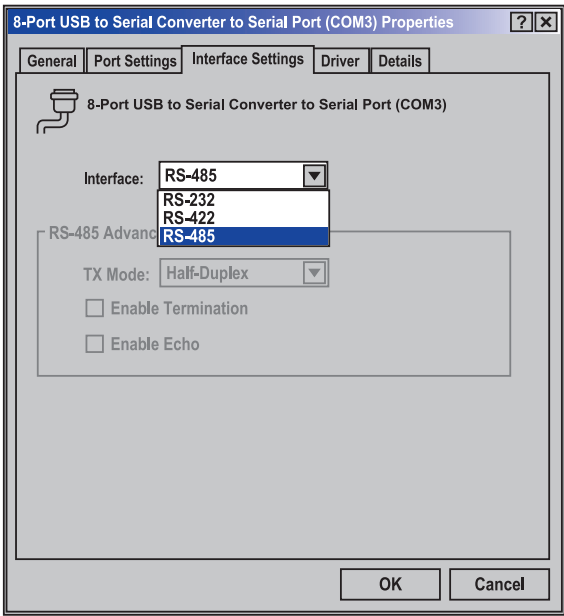


Figure 3-2. Interface settings.

4. Select the appropriate electrical interface for your application and click on “OK.”
- NOTE: The electrical interface settings are maintained across multiple computers. Once the software driver has been installed on target computers, the interface converter can easily be moved from one computer to another without having to configure the electrical interface at each computer.*

3.4.2 Interface Biasing

1K-ohm pull up/pull down combination resistors bias the receiver inputs and are handled automatically for each mode. The pull-up (PU) and pull-down (PD) resistor settings are shown in Table 3-1.

Table 3-1. Pull-up and pull-down resistor settings.

Mode	PU Setting	PD Setting
RS-232	Always off	Always off
RS-422	Always off	Always off
RS-485	Always on	Always on

3.4.3 Line Termination

A 120-ohm resistor is across each RS-422/485 input. If multiple devices are configured in an RS-485 network, only the devices on each end should have the termination in place.

Termination configuration is software selectable for both full- and half-duplex RS-485. By default, line termination is disabled, and this configuration can be set by placing a check next to “Enable Termination” in the “RS-485 Advanced Configuration” field, as shown in Figure 3-3.

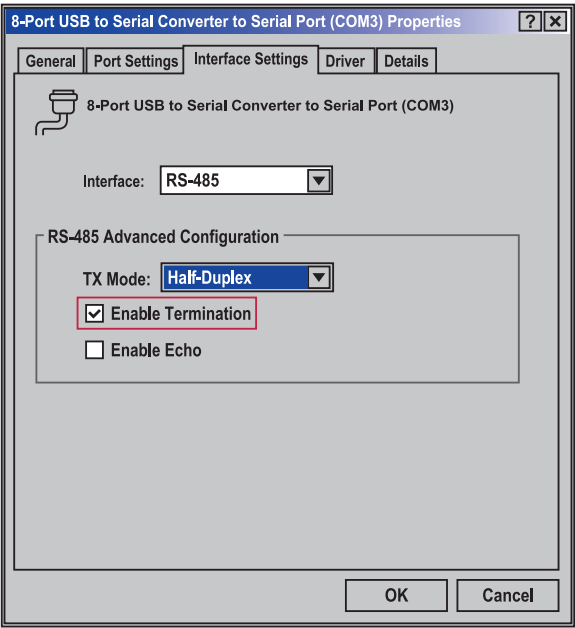


Figure 3-3. Enable Termination.

3.4.4 Echo

The RS-485 “Echo” is the result of connecting the receiver inputs to the transmitter outputs. Each time a character is transmitted, it is also received. This can be beneficial if the software can handle echoing (that is, using received characters to throttle the transmitter), but it can also confuse the system if the software cannot support echoing.

Echo configuration is software selectable for half-duplex RS-485. By default, ECHO is disabled, and this configuration can be set by placing a check next to “Enable Echo” in the “RS-485 Advanced Configuration” field, as shown in Figure 3-4.

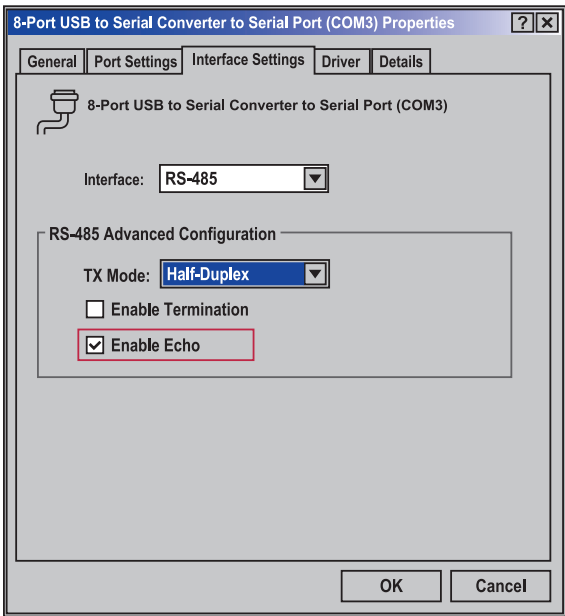


Figure 3-4. Enable Echo.

3.4.5 High-Retention USB Port

The interface converter integrates a patent-pending high-retention USB port that is fully compatible with standard USB cables. When used with the included USB cable, the metal thumbscrew provides a secure metal-to-metal connection to the device and prevents accidental cable disconnection.

3.4.6 Status LEDs

Status LEDs on the front of the converter indicate the following information:

- **MODE** (Red or Green) – Indicates the electrical interface selected
 - Green indicates RS-232 mode
 - Red indicates RS-422 or RS-485 mode
- **DATA** (Green) – Blinks to indicate data is being transmitted or received
- **EN[able]** (Green) – Lights when the hub is properly powered through the USB port and communication between the device and host has been enabled.

3.4.7 DB9M Serial Connectors

The IC293A includes eight DB9 male serial connectors with full modem control signals implemented in RS-232 mode. Pinouts for these connectors are included in Appendix B.

3.4.8 High-Retention USB Type B Port

The converter integrates a patent-pending High-Retention USB port that is fully compatible with standard USB cables. When used with high-retention locking USB cables, the metal thumbscrew provides a secure metal-to-metal connection and prevents accidental cable disconnection.

Accidental cable disconnection is the most common point of failure with USB industrial I/O devices. These cables and connectors prevent this from happening while being fully compatible with standard USB cables.

Figure 3-5 shows the IC293A secured with the included cable.

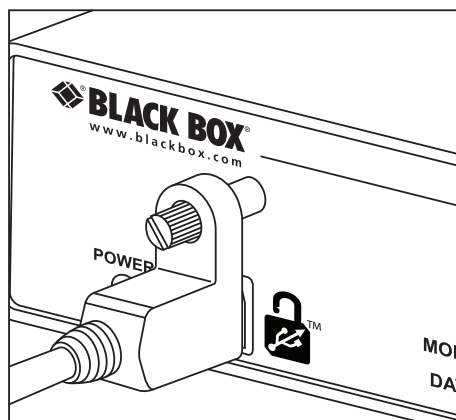


Figure 3-5. Locking cable attached to IC293A.

Appendix A. Troubleshooting

A.1 Troubleshooting Tips

The adapter should provide years of trouble-free service. However, if it appears to be functioning incorrectly, the following tips can eliminate most common problems.

1. Make sure that the SeaCOM software has been installed on the machine so that the necessary files are in place to complete the installation. To confirm installation, click on the Windows "Start" button and then select "All Programs." You should see the "SeaCOM" program folder listed.

NOTE: The driver must be installed before the adapter is connected to your computer.

2. Check to make sure that USB support is enabled and functioning properly in the operating system. The presence of the "Universal Serial Bus controllers" listing in Device Manager will confirm that USB support is enabled in Windows 98SE, ME, 2000, XP, or Vista operating systems.
3. While Device Manager is open, locate the COM ports (described under "Verifying Installation" in the Installation and Configuration section of this manual).
4. Once you have confirmed that the COM ports are listed in Device Manager, you can use the WinSSD utility and a loopback plug to test communications. Detailed help is included in the WinSSD utility.
 - If you have a loopback plug, put it on the DB9 connector that you want to test. If you don't have a loopback plug, contact Technical Support for assistance.
 - If you're testing RS-485 mode, you'll need to have ECHO enabled otherwise the following test will fail. Refer to the Hardware Configuration section for instructions on enabling ECHO.
 - To test communications, launch the WinSSD utility in the folder under the "Start" menu.
 - On the "Port Information" tab, select the COM port you want to test and click on the "Open" button (see Figure A-1).

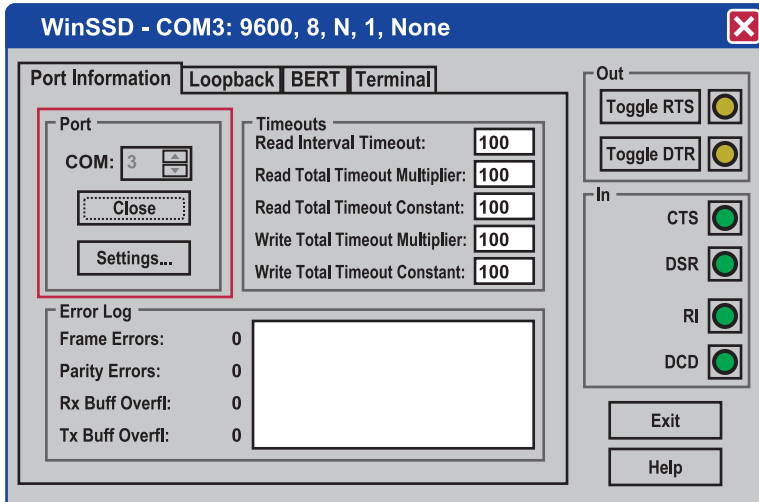


Figure A-1. Port Information tab.

- Click the "Settings" button to open the COM Properties menu. Change your parameters to 9600 bits per second, 8 data bits, no parity, 1 stop bit, and no flow control, as pictured in Figure A-2.

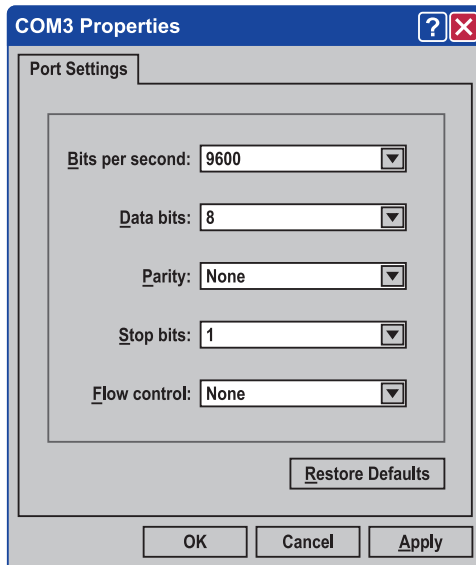


Figure A-2. COM3 Properties tab.

Appendix A: Troubleshooting

- Click “Apply” and “OK.”
- Select the “BERT” tab and with the loopback connected to the port you want to test, click on the “Start” button. If testing RS-485, be sure that ECHO is enabled (see Figure A-3).

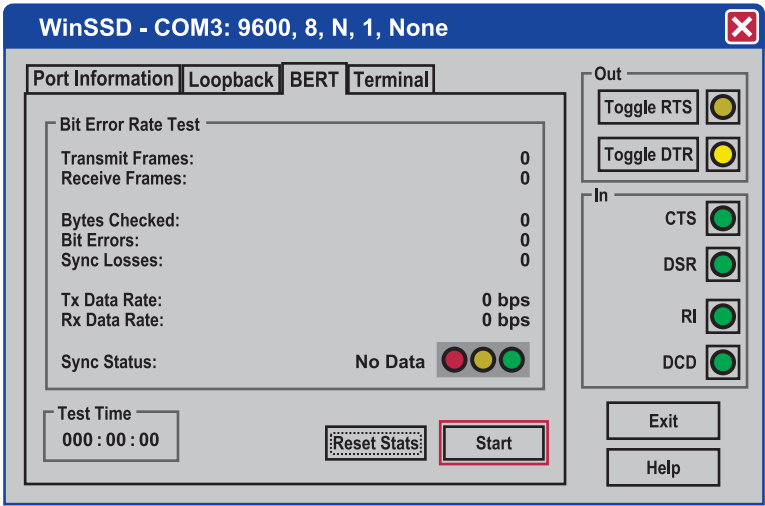


Figure A-3. Start button in WinSSD COM3 screen.

- If the COM port is working properly, the green light will glow and the Transmit Frames and Receive Frames will increase. The Tx and Rx Data Rates will show the calculated data rate (see Figure A-4).

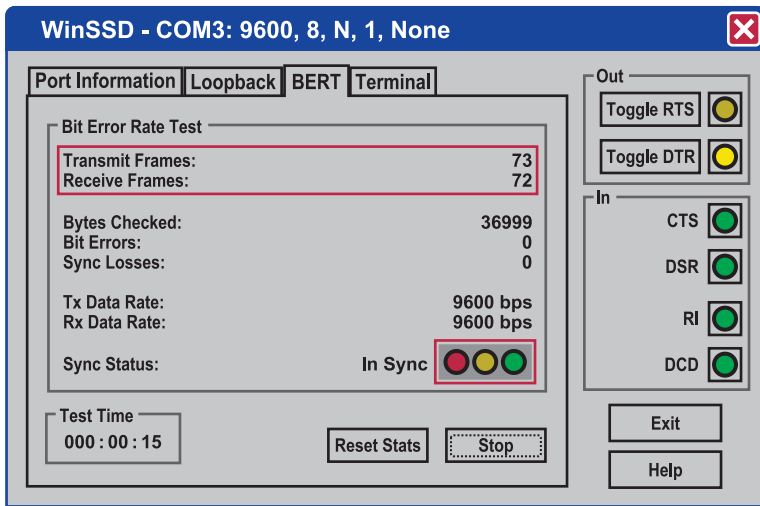


Figure A-4. Calculated data rate.

- You can continue testing this port with different configurations or proceed with testing other ports, if necessary.

If these steps do not solve your problem, contact Black Box Technical Support at 724-746-5500 or info@blackbox.com.

A.2 Contacting Black Box

If you determine that your USB to Multi RS-232/422/485 Interface Converter is malfunctioning, do not attempt to alter or repair the unit. It contains no user-serviceable parts. Contact Black Box Technical Support at 724-746-5500 or info@blackbox.com.

Before you do, make a record of the history of the problem. We will be able to provide more efficient and accurate assistance if you have a complete description, including:

- the nature and duration of the problem.
- when the problem occurs.
- the components involved in the problem.
- any particular application that, when used, appears to create the problem or make it worse.

Appendix A: Troubleshooting

A.2 Shipping and Packaging

If you need to transport or ship your USB to Multi RS-232/422/485 Interface Converter:

- Package it carefully. We recommend that you use the original container.
- If you are returning the unit, make sure you include everything you received with it. Before you ship for return or repair, contact Black Box to get a Return Authorization (RA) number.

Appendix B. Electrical Interfaces

The IC293A connects to a single USB port and provides eight RS-232/422/485 software configurable serial ports. The IC293A uses high-speed USB/UARTs with 128-byte TX FIFOs and 384-byte RX FIFOs. The chips feature programmable baud rates and data rates to 921.6 kbps.


Connector Pinouts

RS-232 (DB9 male)

Figure B-1. DB9 male connector.

Table B-1. RS-232 (DB9 male connector pinout).

Pin Number	Signal
1	DCD
2	RX
3	TX
4	DTR
5	GND
6	DSR
7	RTS
8	CTS
9	RI



RS-422 and RS-485 four-wire (DB9 male)

Table B-2. RS-422 and RS-485 (DB9 male connector pinout).

Pin Number	Signal
1	RX+
2	RX-
3	TX+
4	TX-
5	GND

NOTE: Pins 6–9 are not connected.

RS-485 two-wire (DB9 male)

Table B-2. RS-422 and RS-485 (DB9 male connector pinout).

Pin Number	Signal
3	DATA-
4	DATA+
5	GND

NOTE: Pins 1, 2, and 6-9 are not connected.

Figure B-2. DB9 male connector.





Figure B-3. DB9 male connector.



Black Box Tech Support: FREE! Live. 24/7.

Tech support the
way it should be.



Great tech support is just 30 seconds away at
724-746-5500 or blackbox.com.



About Black Box

Black Box Network Services is your source for an extensive range of networking and infrastructure products. You'll find everything from cabinets and racks and power and surge protection products to media converters and Ethernet switches all supported by free, live 24/7 Tech support available in 30 seconds or less.

© Copyright 2011. Black Box Corporation. All rights reserved.

IC293A, version 1

724-746-5500 | blackbox.com